



# ExoTEST™ Ready to Use Kit for ELISA Extracellular Vesicle quantification

This product is for research use only. It is highly recommended to read this users guide in its entirety prior to using this product.

Do not use this kit or its components beyond the indicated expiration date.



Scan for the PDF datasheet!

Version: 2\_2025 info@hansabiomed.eu



## TABLE OF CONTENTS

Product description	4
Product content	4
Storage information	5
ExoTEST <sup>TM</sup> Ready to Use Kit procedure	6
Data analysis	10
Sensitivity	10
Reproducibility	11
Troubleshooting	12

HansaBioMed Life Sciences Ltd is a company entirely dedicated to research and development of products in the field of exosome sciences.

#### PRODUCT DESCRIPTION

#### Product overview

ExoTEST™ is a patented double sandwich ELISA assay for quantitative and aualitative analysis of exosomes. In particular ExoTEST™ is a successful platform for exosomes augntification and characterization from small amount of human biological fluids or cell media and it may be exploited to identify exosomes released by cancer cells in the plasma and urine of tumor patients in various disease conditions

ExoTEST™ consists in ELISA plates pre-coated with proprietary pan-exosome antibod- ies enabling specific capture of exosomes from different biological samples, including cell culture supernatants and human biological fluids. Quantification and characteri-zation of exosomal proteins is subsequently performed using appropriate detection antibodies against exosome associated antigens that can be for either generic or cell/ tissue-specific exosomes. Lyophilized Exosome Standards, charcterized for protein con-tent and particle number (NTA) allow the quantification of unknown sample by a standard calibration curve

#### PRODUCT CONTENT

#### Reagents provide in each kit:

Description	Component		Amount
Sample buffer 1X	Buffer for antibody dilution and incubation		2 bottles (2 X 10 ml)
Washing buffer 25X	Buffer for washing plate	Buffer for washing plate	
	Colorimetric kit	Substrate solution + Stop solution	2 bottles (2 x 10 ml)
Detection solutions	Luminometric Kit	ninometric Kit Substrate solutions A and B	
Immunoplate		Immunoplate standard multiwell plates 96-well format where assays can be conducted as singletons and/or multiple wells	
Exosome Standards for assay calibration	Lyophilized Exosome Standards in according with kit purchased		2 vials (2 X 100 μg)
Primary Antibody	Monoclonal Anti-Human CD9 (unconjugated or biotin conjugated)		1 vial (20 µI)
HRP conjugated	HRP-conjugated secondary antibody (8 µl) or streptavidin (5 µl)		1 vial (8 µl) or 1 vial (5 µl)
* For TEST kit the amount of reagents is limited to 24 well assay			

#### Other material required

- Single-use and/or pipettes with disposable tips 2-100 ul
- Polypropylene tubes
- Pipettes 1 ml and 5 ml for reagent preparation
- Deionized water
- PBS
- Plate shaker
- Humidified chamber or incubator at 37 °C.
- Disposable pipetting reservoirs
- Microplate reader
- ELISA sealing film or parafilm

#### STORAGE INFORMATION

All reagents provided within the ExoTESTTM Ready To Use Kits can be stored at  $+4^{\circ}$ C for up to 24 months, if unopened.


#### DO NOT FREEZE

Open and reconstituted components			
ELISA stripes	Unused stripes should be placed back in the foil pouch with the included desiccant pack, resealed and stored at +4°C for up to six months.		
Exosome standards	The remaining reconstituted standard stock solution should be aliquoted into polypropylene vials (preferably low binding) and stored at -20°C for up to one month or at -80°C for up to six months. Strictly avoid repeated freeze-and-thaw cycles.		
Primary detection antibody			
Sample buffer 1X			
Washing buffer 25X	Store opened and diluted reagents at +4°C up to 24 months if		
HRP conjugated	unopened. After opening, use within one month.		
Substrate for chromogenic or luminometric detection in buffered solution, ready to use			
Stop solution (only in colorimetric kit)			

#### EXOTEST™ READY TO USE KIT PROCEDURE

#### Overview

ExoTESIT<sup>M</sup> Ready to Use Kithas been designed to capture exosomes onto ELISA plate and quantify them by colorimetric or luminometric detection from any biological sample.

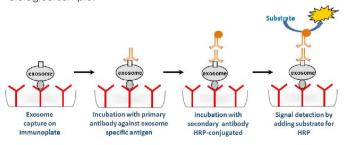

WARNING! Do not use with plasma heparin samples!

#### STEP A: Sample preparation

#### 1 Human plasma and serum

Prepare samples by 3 centrifugation steps to eliminate red blood cells and cellular debris. After each step, transfer the supernatant to a new tube and discard the pellet.

- 10' at 300 a at 4 °C (save supernatant: discard pellet).
- 20' at 1200 g at 4 °C (save supernatant; discard pellet).
- 30' at 10000 a at 4 °C (save supernatant: discard pellet).
- Human plasma can be diluted 1/1 in PBS 1X prior to load onto ELISA plates. Human serum has to be used without dilution.

#### 2 Cell culture medium

Prepare cell supernatant by 3 centrifugation steps:

- 10' at 300 g at 4 °C (save supernatant; discard pellet).
- 20' at 1600 g at 4 °C (save supernatant; discard pellet).
- 30' at 10 000 a at 4°C (save supernatant: discard pellet).
- Concentrate cell supernatant 10-20 fold in spin concentrator\*.

#### 3 Human urine

- Centrifuge at 16 000 g for 20' at room temperature.
- Filter by using 0.45 µm filter.
- Concentrate urine samples by spin concentrator 15-20 times\*.

<sup>\*</sup>The quantity of exosomes could vary between samples. Concentration factors are given for information purposes only, a larger starting amount of sample should be used if the signal is weak.


#### STEP B: Exosome Standard reconstitution and calibration curve

#### Reconstituted Exosome Standard for calibration curve

- Reconstitute lyophilized exosome standard by adding 100 µl of deionized water in each vial.
- Pipette the solution up and down 10-15 times, avoiding bubbles.
- Vortex the reconstituted standard for 60 seconds. Briefly centrifuge the tubes to spin down the drops and ensure that the solution is collected at the bottom of the tube.
- Pipette the solution up and down 10 times, again avoiding bubbles.
- Briefly centrifuae again.
- Add 100 µl of PBS 1X to reach a final volume of 200 µl per vial.

#### Calibration curve:

- Add 200 µl of reconstituted exosome solution to wells A1 and A2 (2 wells only).
- Add 100 µl of 1x PBS to wells B1 to H2 (14 wells).
- Serial dilution (stop at G1 and G2).
- Transfer 100 ul of A1 into B1 and mix.
- Transfer 100 µl of B1 into C1 and mix.
- Transfer 100 µl of C1 into D1 and mix.
- Transfer 100 µl of D1 into E1 and mix.
  Transfer 100 µl of E1 into E1 and mix.
- Transfer 100 µl of F1 into G1 and mix.
- Discard 100 ul from G1 to result in a final volume of 100 ul.
- NOTE: Leave H1 (and H2) as 1x PBS for negative controls.
- Repeat serial dilution for A2 to G2.

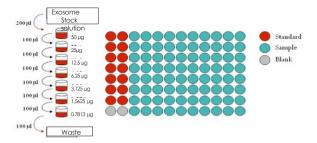

#### Illustration of the two-fold serial dilutions required for calibration curve

Add 100  $\mu$ l of PBS 1X to reconstituted exosome standard to obtain a volume of 200  $\mu$ l,

then transfer in the first well of ELISA strip. Add  $100 \, \mu l$  of PBS 1X in the other wells of the strip used for standard curve and prepare exosome dilutions as indicated in figure.

#### 3. Sample loading

- Add 100 µl of prepared samples to wells A3 to H12 (add PB\$ 1X if the volume is minor than 100 µl).
- Seal the plate with parafilm and incubate at room temperature while shaking for 30' (2-3 rotations per second).

#### 4. Sample incubation for exosome binding

- For human plasma and serum
- Transfer the plate to +4°C and incubate overnight (12h-20h).
- For human urine and cell culture medium.
- Transfer the plate to +37°C and incubate overnight (12h-20h) in humid chamber.

#### STEP C: Wash the plate

**NOTE:** Make sure to never touch the bottom or sides of the wells or you will scrape off your samples/standards. As a reminder "No Touch" is placed on that line

- Prepare 1X Washing Buffer by adding 20 ml of 25X to 480 ml of deionized water for a final volume of 500 ml
- Add 200 µl/well of Washing Buffer and discard plate contents by pouring out. No Touch.
- Wash 3 times with 300 µl/well of Washing Buffer. After each addition, pour off wash. No Touch.

#### STEP D: Antibody binding

- Prepare primary antibody solution. Dilute detection antibody 1/500 in Sample Buffer 1X by mixing 20 µl of antibody with 10 ml of Sample buffer.
- Add 100 ul of diluted antibody solution to each well.

#### For human plasma and serum:

 Seal the plate with parafilm and incubate at room temperature while shaking for 15' (2-3 rotations per second). Then incubate for 2 hours at 4° C.

#### For human urine and cell culture medium:

- Seal the plate with parafilm and incubate at room temperature while shaking for 15' (2-3 rotations per second). Then incubate for 2 hours at 37°C in humid chamber.
- Wash the plate (follow STEP C: Wash the plate).
- HPR-Conjugated (anti-Mouse-HRP or Streptavidin-HRP) must be diluted in Sample Buffer 1X as indicated below.

**Anti-Mouse-HRP:** Dilute 1/2000 by mixing 5  $\mu$ l of anti-Mouse-HRP to 10 ml of Sample Buffer 1X.

Streptavidin-HRP: Dilute 1/5000 by mixing 2  $\mu$ l of Streptavidin-HRP to 10 ml of Sample Buffer 1X.

Add 100 µl of diluted HRP-conjugated to each well.

#### For human plasma and serum:

 Seal the plate with parafilm and incubate at room temperature while shaking for 15' (2-3 rotations per second). Then incubate for 1 hours at 4° C.

#### For human urine and cell culture medium:

- Seal the plate with parafilm and incubate at room temperature while shaking for 15' (2-3 rotations per second). Then incubate for 1 hours at 37°C in humid chamber.
- Wash the plate (follow STEP C: Wash the plate).

#### STEP E: Signal Detection

#### Detection for colorimetric reading

- Add 100 µl of Substrate Chromogenic Solution to each well and incubate uncovered at room temperature in the dark for 5-10. Monitor until a blue color is visible.
- Stop the reaction by adding 100 µl of Stop Solution to each well. The color will change from blue to yellow.
- Read the absorbance at 450 nm within 10 minutes. If possible, the absorbance should also be read at 570 nm and the measurement should be subtracted from the measurement at absorbance 450 nm.

#### **Detection for luminometric reading**

- Mix 5 ml of luminometric Solution A with 5 ml of luminometric Solution B.
- Add 100 ul of Substrate Solution A+B per well.
- Read immediately in a luminometer at 425 nm.


#### NOTE:

- Be careful not to immerse metallic components of a pipette into substrate solution.
- Avoid making bubbles and, if formed, remove them gently with a pipette tip. Intensity of color is proportional to the exosome concentration only within a certain dynamic range.
- Many plate readers do not deliver accurate results when the OD is above 3.

Exosome standards are provided as assay calibrators and also as positive control. And it is important to note that the origin of purified standard exosomes may change the proportion of common exosomal proteins such as CD9 or CD63

The amount of proteins on their membrane might differslightly from the amount on the sample exosomes. The standard curve is used to determine the amount of exosomes in an unknown sample. The curve is obtained by plotting the average readings for different standard concentrations against the corresponding amounts of exosomes. Calculate the mean absorbance for each set of duplicate standards, controls and samples. The values of the negative controls (blanks) must be subtracted from all OD and RLU.


The regression curve coefficient should be above 0.90. The estimated sample concentration is reliable if within the linear range of the curve, otherwise the samples must be diluted and the test repeated. For diluted samples multiply the concentrations with the appropriate dilution factor.

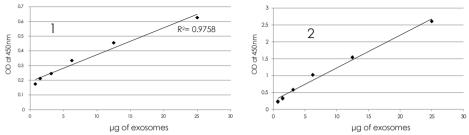


1: Example of standard curves: CD9 Titration of HBM-COLO1 (1) and plasma (HBM-PEP) (2) Exosome Standards.This standard curve is for demonstration only. For quantification purposes a standard curve must be obtained with every assay.

#### **SENSITIVITY**

The sensitivity of the ExoTEST<sup>TM</sup> was compared to Western blot. The data reported in figure 2 and 3 demonstrate that the sensitivity of the ExoTEST<sup>TM</sup> is higher than that of Western blotting. Figure 3 shows that 10 µg of lyophilized exosomes are equivalent to 0.1 ng of recombinant exosomal protein. Since the standard curve's lower concentration is 0.39 µg of lyophilized exosomes (fig. 2), the sensitivity of our test is around 39 pg of protein equivalent.



2. CD9 titration of plasma healthy donor exosome standards (HBM-PEP100) .

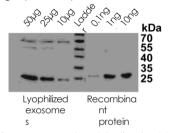


 CD9 exosome marker detection by Western Blotting on lyophilized exosomes from human plasma (HBM- PEP100) and recombinant CD9 protein.

Intra assay (within run) CV (%) < 10 Inter assay (interplate run) CV (%) < 13


Coefficient of variation (CV) is expressed as a percentage of variance to the mean calculated for intra assay reproducibility evaluation by assessing at least 4 replicates of 3 different standard preparations containing different exosome concentrations. Subsequently, assay-to-assay reproducibility was assessed by comparing mean absorbances for the same samples on independent plates tested by different operators.

#### ExoTEST<sup>TM</sup> is a sensitive method for exosome quantification in human biofluids

We report an example of exosome quantification performed in 5 unknown plasma samples from healthy donors using the ExoTEST™ Ready to use kit for Overall Exosome quantification from human plasma (HBM-RTK-POF/IP). Following Lyophilized Standards and unknown samples binding onto the ELISA plate, test is run in according to the kit protocol and exosome detection is performed with anti-CD9 antibody (HBM).

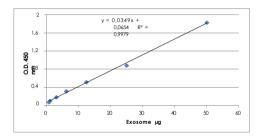

4. Standard curve obtained with Lyophilized Exosome Standards from human plasma healthy donors (HBM-PEP100) with anti-CD9 antibody.

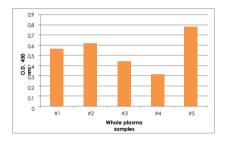

5. CD9 titration of exosomes in 5 different whole plasma from healthy donor samples.

Exosome quantification is finally performed calculating the quantity of exosomes (expressed in  $\mu$ g) into the 5 unknown samples through the equation of the standard curve (Fig 4). The particles number contained in 100  $\mu$ l of plasma is calculated from quantity of exosomes (expressed in  $\mu$ g) in according to the particles concentration (number of particles/ml) indicated in the label of the Lyophilized Exosome Standards (HBM-PEP100, NTA:  $3x10^{11}$  particles/ml)

Plasma sample	O.D. 450 nm	Exosome µg	Particle number in 100 µl of plasma	
#1	0,5673	12,869	3,86x10^9	
#2	0,6194	14,205	4,26x10^9	
#3	0,4425	9,6692	2,90x10^9	
#4	0,3100	6,2717	1,88x10^9	
#5	0,7853	18,458	5,54x10^9	

# **TROUBLESHOOTING**

Problem/Possible Cause	Suggested Solution		
	High background across entire plate		
Substrate incubation carried out in the light	Substrate incubation should be carried out in the dark.		
Incubation temperature too high	Antibodies have optimum binding activity at the correct temperature. Ensure that the incubations are carried out at the correct temperature and that incubators are set at the correct temperature and working. Incubation temperature may require some optimization.		
Secondary antibody too concentrate or too long incubation	Check dilution of secondary antibody, use it at the recommended dilution. Stop the reaction using stop buffer as soon as the plate has developed enough for absorbance readings.		
Substrate solution or stop solution is not fresh	Use fresh substrate solution. Stop solution should be clear (if it has gone yellow, this is a sign of contamination and it should be replaced).		
Contaminants from laboratory glassware	Ensure reagents are fresh and prepared in clean glassware.		
Positive signal in negative control			
Contamination of reagents/ samples	May be contamination of reagents or samples, avoid cross contamination between different wells.  Use fresh reagents and pipette carefully.		
Insufficient washing of plates	Ensure wells are washed adequately. Soak the wells with wash buffer and tap plate on absorbent paper after every wash.		
Low absorbance values			
Target protein not present in sample /Low level of target protein in sample	Check the expression profile of the target protein to ensure that it is present in your samples. If the quantity of target protein is very low, increase the amount of sample used, or try to concentrate. Ensure you are using a positive control within the detection range of the assay.		
Insufficient primary or secondary antibody	Check the recommended amount of antibody is being used. The concentration of antibody may require increasing for optimization of results.		
Substrate solutions not fresh or incorrectly combined	Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed at the correct concentration.		
Reagents not fresh or not at the correct pH	Ensure reagents have been prepared correctly and are in date.		

# **TROUBLESHOOTING**

fime, if an incubation time is suggested. The incubation time may require increasing for optimization of results. Longer incubation time may be required.  Antibodies have optimum binding activity at the correct temperature. Ensuthe incubations are carried out at the correct temperature and that incubations are set at the correct temperature and working. Incubation temperature may require some optimization.  Ensure all reagents are at room temperature before proceeding.  Addition of stop solution increases the intensity of colour reaction and stabilizes the final colour reaction.  Inconsistent absorbances across the plate				
incubation time it is an incubation time is suggested. The incubation time may require increasing for optimization of results. Longer incubation time may be required.  Antibodies have optimized in the correct temperature and that incubation are seried out at the correct temperature and working, incubation temperature and requires one optimization.  Inconsistent disorbances across the plate  Plates stacked aduring incubations  Inconsistent disorbances across the plate  Plates stacked aduring incubations  Inconsistent disorbances across the plate  Plates stacked aduring incubations  Inconsistent disorbances across the plate  Plates stacked aduring incubations  Inconsistent disorbances across the plate  Stacking of plates does not allow distribution of temperature across the well of the plates. Avoid stacking.  Ensure pipettes are working correctly and are calibrated. Ensure pipette tips are pushed on far enough to create a good seal. Take particular care when dilluting down the plate and watch to make sure the pipette tips are all picking up and releasing the carect amount of liquid. This will greatly affect consistency of results between duplicates.  Antibody  Antibody  Altibody allutions/Reagents not wells allowed to dry out  Inadequate washing  This will lead to some wells not being washed as well as others, leaving inside different amounts of unbound antibody, which will give inconsistent results.  Clean the bottom of the plate carefully before rereading the plate.  Clean the bottom of the plate carefully before rereading the plate.  Clean the bottom of the plate carefully before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.	Problem/Possible Cause	Suggested Solution		
Incubation temperature too low the incubations are carried out at the correct temperature and working. Incubation temperature and vorking. Incubation temperature may require some optimization.  Ensure all reagents are at room temperature before proceeding.  Addition of stop solution increases the intensity of colour reaction and stabilizes the final colour reaction.  Inconsistent absorbances across the plate  Plates stacked during incubations Incubations at abilizes the final colour reaction.  Inconsistent absorbances across the plate  Stacking of plates does not allow distribution of temperature across the well of the plates. Avoid stacking.  Ensure pipettes are working correctly and are colibrated. Ensure pipette tips are pushed on far enough to areate a good seal. Take particular care when dilluting down the plate and watch to make sure the pipette tips are pushed on far enough to areate a good seal. Take particular care when dillutions/Reagents not well mixed  Antibody dilutions/Reagents not well mixed  Wells allowed to dry out  Mells allowed to dry out  Ensure that plates are well sealed with film when incubating. Place a humidifying water tray (bottled deanysterie water) on the bottom of the incubator.  Inadequate washing  This will lead to some wells not being washed as well as others, leaving inside different amounts of unbound antibody, which will give inconsistent results.  Clean the bottom of the plate carefully before re-reading the plate.  Colour developing slowly  Plates are not at the correct temperature  Ensure plates are at room temperature and that the reagents are at room temperature before use.  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.		increasing for optimization of results. Longer incubation time may be		
Inconsistent absorbances across the plate  Plates stacked during incubations of the plates. Avoid stacking.  Ensure pipettes are working correctly and are collibrated. Ensure pipette tips are pushed on far enough to create a good seal. Take particular care when diluting down the plate and watch to make sure the pipette tips are pushed on far enough to create a good seal. Take particular care when diluting down the plate and watch to make sure the pipette tips are pushed on far enough to create a good seal. Take particular care when dilutions down the plate and watch to make sure the pipette tips are pushed on far enough to create a good seal. Take particular care when dilutions down the plate and watch to make sure the pipette tips are pushed on far enough to create a good seal. Take particular care when dilutions down the plate and watch to make sure the pipette tips are pushed on far enough to create a good seal. Take particular care when dilutions of samples/standards across wells, ensure all picking up and releasing the correct amount of it pipet.  To ensure a correct dilution of samples/standards across wells, ensure all reagents and samples are mixed before pipetting onto the plate.  Ensure that plates are well sealed with film when incubating. Place a humidifying water tray (bottled clean/sterile water) on the bottom of the incubator.  This will lead to some wells not being washed as well as others, leaving inside different amounts of unbound antibody, which will give inconsistent results.  Clean the bottom of the plate carefully before re-reading the plate.  Clean the bottom of the plate carefully before re-reading the plate.  Ensure plates are at room temperature and that the reagents are at room temperature before use.  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.		incubators are set at the correct temperature and working. Incubation temperature may require some optimization.		
Plates stacked during incubations  Stacking of plates does not allow distribution of temperature across the well of the plates. Avoid stacking.  Ensure pipettes are working correctly and are calibrated. Ensure pipette tips are pushed on far enough to create a good seal. Take particular care when diluting down the plate and watch to make sure the pipette tips are all picking up and releasing the correct amount of liquid. This will greatly affect consistency of results between duplicates.  Antibody dilutions/Reagents not well mixed  Wells allowed to dry out  Bensure a correct dilution of samples/standards across wells, ensure all reagents and samples are will sealed with film when incubating. Place a humidifying water tray (bottled clean/sterile water) on the bottom of the incubator.  Inadequate washing  This will lead to some wells not being washed as well as others, leaving inside different amounts of unbound antibody, which will give inconsistent results.  Bottom of the plate is dirty affecting absorbance readings  Colour developing slowly  Plates are not at the correct temperature  Ensure plates are at room temperature and that the reagents are at room temperature before use.  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.	Stop solution not added			
during incubations  of the plates. Avoid stacking.  Ensure pipettes are working correctly and are calibrated. Ensure pipette tips are pushed on far enough to create a good seal. Take particular care when diluting down the plate and watch to make sure the pipette tips are all picking up and releasing the correct amount of liquid.  This will greatly affect consistency of results between duplicates.  Antibody  dilutions/Reagents not well mixed  Wells allowed to dry out  Ensure that plates are well sealed with film when incubating. Place a humidifying water tray (bottled clean/sterile water) on the bottom of the incubator.  This will lead to some wells not being washed as well as others, leaving inside different amounts of unbound antibody, which will give inconsistent results.  Bottom of the plate is dirty affecting absorbance readings  Colour developing slowly  Plates are not at the correct temperature  Secondary Antibody too weak staining  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.		Inconsistent absorbances across the plate		
tips are pushed on far enough to create a good seal. Take particular care when diluting down the plate and watch to make sure the pipette tips are all picking up and releasing the correct amount of liquid.  This will greatly affect consistency of results between duplicates.  Antibody dilutions/Reagents not well mixed  Wells allowed to dry out  Ensure that plates are well sealed with film when incubating. Place a humidifying water tray (bottled clean/sterile water) on the bottom of the incubator.  This will lead to some wells not being washed as well as others, leaving inside different amounts of unbound antibody, which will give inconsistent results.  Clean the bottom of the plate carefully before re-reading the plate.  Colour developing slowly  Ensure plates are at room temperature and that the reagents are at room temperature before use.  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents can affect the substrate reaction.  Avoid using reagents containing these preservatives.		Stacking of plates does not allow distribution of temperature across the wells of the plates. Avoid stacking.		
dilutions/Reagents not well mixed  Wells allowed to dry out  Ensure that plates are well sealed with film when incubating. Place a humidifying water tray (bottled clean/sterile water) on the bottom of the incubator.  Inadequate washing  This will lead to some wells not being washed as well as others, leaving inside different amounts of unbound antibody, which will give inconsistent results.  Bottom of the plate is dirty affecting absorbance readings  Clean the bottom of the plate carefully before re-reading the plate.  Clour developing slowly  Plates are not at the correct temperature  Secondary Antibody too weak staining  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.	Pipetting inconsistent	tips are pushed on far enough to create a good seal. Take particular care when diluting down the plate and watch to make sure the pipette tips are all picking up and releasing the correct amount of liquid.		
humidifying water tray (bottled clean/sterile water) on the bottom of the incubator.  Inadequate washing  This will lead to some wells not being washed as well as others, leaving inside different amounts of unbound antibody, which will give inconsistent results.  Bottom of the plate is dirty affecting absorbance readings  Clean the bottom of the plate carefully before re-reading the plate.  Clour developing slowly  Plates are not at the correct temperature  Ensure plates are at room temperature and that the reagents are at room temperature before use.  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.	dilutions/Reagents not			
inside different amounts of unbound antibody, which will give inconsistent results.  Bottom of the plate is dirty affecting absorbance readings  Clean the bottom of the plate carefully before re-reading the plate.  Clean the bottom of the plate carefully before re-reading the plate.  Clour developing slowly  Plates are not at the correct temperature  Ensure plates are at room temperature and that the reagents are at room temperature before use.  Secondary Antibody too weak staining  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.	Wells allowed to dry out	humidifying water tray (bottled clean/sterile water) on the bottom of the		
Clean the bottom of the plate catefully before tereading the plate.  Colour developing slowly  Plates are not at the correct temperature  Secondary Antibody too weak staining  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.	Inadequate washing	inside different amounts of unbound antibody, which will give		
Plates are not at the correct temperature  Secondary Antibody too weak staining  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.	affecting absorbance	Clean the bottom of the plate carefully before re-reading the plate.		
correct temperature room temperature before use.  Secondary Antibody too weak staining  Prepare the substrate solutions immediately before use. Ensure that the stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.		Colour developing slowly		
secondary Antibody foo weak staining stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used as directed.  Presence of contaminants, such as sodium azide and peroxides can affect the substrate reaction.  Avoid using reagents containing these preservatives.				
Contamination of solutions affect the substrate reaction.  Avoid using reagents containing these preservatives.		stock solutions are in date and have been stored correctly, and are being used at the correct concentration. Ensure the reagents are used		
Poor Standard Curve	Contamination of solutions	affect the substrate reaction.		
	Poor Standard Curve			
Inaccurate pipetting Check pipettes and pipette with increase attention.	Inaccurate pipetting	Check pipettes and pipette with increase attention.		
Improper standard preparation  Ensure to reconstitute standards in a proper buffer and mixing thoroughly by vortexing and gentle pipetting.				
Improper washings Wash thoroughly as recommended in the assay procedure; add one wash step after incubation with HRP-conjugated.	Improper washings			

# **TROUBLESHOOTING**

Problem/Cause	Suggested Solution		
Low signals			
Low signals in standards due to improper storage or preparation	Ensure to store reconstituted standards at -20°C and strictly avoid thaw and freeze cycles. Assure that standards are properly reconstituted and standard dilutions prepared as suggested in data sheet.		
Low signals in samples due to low exosome concentration	Check out sample preparation protocols or contact our customer service at <a href="info@hansabiomed.eu">info@hansabiomed.eu</a> .		
Low reproducibility of duplicates			
Inaccurate pipetting	Check pipettes and increase attention.		
Improper standards and samples preparation	Ensure to mix thoroughly by vortexing and gentle pipetting before loading onto wells.		

Technical Support: <u>info@hansabiomed.eu</u>

## **RELATED PRODUCTS**

### Overview

As the first company entirely dedicated to the field of exosomes, we offer a panel of Kits and Reagents for Exosome Research.

Ordering information on a variety of reagents and apparatus available from HansaBioMed is provided below. For more information, visit our website at www.hansabiomed.eu

Products	Quantity	Catalog Number
Exosome Total RNA Extraction Kit (Immunobeads, 10 or 20 Reactions)	Ready to Use Kit	HBM-RNA-BOF-##/#
Tumor-derived Exosome Total RNA Extraction Kit (Immunobeads, 10 or 20 Reactions)	Ready to Use Kit	HBM-RNA-BTF-##/#
Immunoplates for Overall Exosome capture from Biological fluids	96 wells immunoplate	HBM-POF-##/##
Immunoplates for Overall Exosome capture from human Serum	96 wells immunoplate	HBM-POS-##/##
Immunoplates for Overall Exosome capture from Cell culture supernatant	96 wells immunoplate	HBM-POC-##/##
Immunoplates for Tumor-derived Exosome capture and enrichment from Biological fluids	96 wells immunoplate	HBM-PTF-##/##
Immunoplates for Neural-derived Exosome capture and enrichment from Biological fluids	96 wells immunoplate	HBM-PNF-##/##
Immunoplates for Glial-derived Exosome capture and enrichment from Biological fluids	96 wells immunoplate	HBM-PGF-##/##
Immunoplates for Monocytes- and Platelets-derived Exosome capture and enrichment from Plasma samples	96 wells immunoplate	HBM-PPP-##/##
Immunobeads for Overall Exosome capture from Biological fluids - 0.4, 1 or 4 microns immunobeads size - Simple or Covalent coating	10 or 20 reactions	HBM-BOLF-##/##-#
Immunobeads for Overall Exosome capture from Cell culture supernatant - 0.4, 1 or 4 microns immunobeads size - Simple or Covalent coating	10 or 20 reactions	HBM-BOLC-##/##-#
Immunobeads for Tumor-derived Exosome capture and enrichment from Biological fluids -0.4, 1 or 4 microns immunobeads size - Simple or Covalent coating	10 or 20 reactions	HBM-BTLF-##/##-#
Exosome Binding Antibodies		Check Ab available on www.exotest.eu



HansaBiomed Life Science Homepage www.hansabiomed.eu

Online Shop https://hansabiomed.eu/shop/

HansaBioMed Life Sciences

Mäealuse 2/1, 12618 Tallinn, ESTONIA www.hansabiomed.eu

Email: info@hansabiomed.eu

**Tel:** +372 6561996



Scan for the PDF datasheet!